



12" Balustrade System Baluster Top Rail Radius

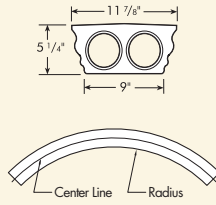

Part Number	Radius	Center Line Length	Baluster Rail Installation Kit* (See Installation Guide Page 38)
BTRR12X48	48"	75" (1/4 Circle)	BRK12
BTRR12X60	60"	94" (1/4 Circle)	BRK12
BTRR12X77	76 1/2"	122" (1/4 Circle)	BRK12
BTRR12X96	96"	120" (1/5 Circle)	BRK12
BTRR12X110	110"	78" (1/8 Circle)	BRK12
BTRR12X126	126"	102" (1/8 Circle)	BRK12
NEW BTRR12X192	192 1/2"	100" (1/12 Circle)	BRK12
BTRR12X247	246 15/16"	98" (1/16 Circle)	BRK12

*Includes hardware to mount top and bottom rail to a baluster:
 (4 qty.) Bear Claw Brackets.
 (4 qty.) 3/16"-18 Clip Nuts.
 (16 qty.) #12 x 3/4" Pan Head Screws.
 (4 qty.) 3/16"-18 x 5" Hex Head Cap Screws.
 (4 qty.) 3/16" x 1 1/2" Fender Washers.
 (4 qty.) 1/4" x 20 x 2" Flat Head Self Tapping Screws.

12" Balustrade System Baluster Bottom Rail Radius

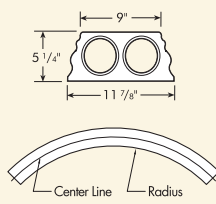

Part Number	Radius	Center Line Length	Baluster Rail Installation Kit* (See Installation Guide Page 38)	Rail Support Block (Page 32 BL)
BBRR12X48	48"	75" (1/4 Circle)	BRK12	RSB4X4X6
BBRR12X60	60"	94" (1/4 Circle)	BRK12	RSB4X4X6
BBRR12X77	76 1/2"	122" (1/4 Circle)	BRK12	RSB4X4X6
BBRR12X96	96"	120" (1/5 Circle)	BRK12	RSB4X4X6
BBRR12X110	110"	78" (1/8 Circle)	BRK12	RSB4X4X6
BBRR12X126	126"	102" (1/8 Circle)	BRK12	RSB4X4X6
NEW BBRR12X192	192 1/2"	100" (1/12 Circle)	BRK12	RSB4X4X6
BBRR12X247	246 15/16"	98" (1/16 Circle)	BRK12	RSB4X4X6

*Includes hardware to mount top and bottom rail to a baluster:
 (4 qty.) Bear Claw Brackets.
 (4 qty.) 3/16"-18 Clip Nuts.
 (16 qty.) #12 x 3/4" Pan Head Screws.
 (4 qty.) 3/16"-18 x 5" Hex Head Cap Screws.
 (4 qty.) 3/16" x 1 1/2" Fender Washers.
 (4 qty.) 1/4" x 20 x 2" Flat Head Self Tapping Screws.