 



## 5" Balustrade System Top Rail

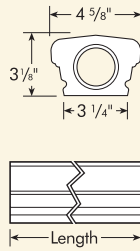

Part Number	Length	Baluster Rail Installation Kit* <small>(See Installation Guide Page 32)</small>	
<b>BTR5X96</b>	96"	BRK5	
<b>BTR5X144</b> <small>Note: Max. rail span distance for field applications is 96"</small>	144"	BRK5	

\*Connects both ends of one 5" Rail to applications.  
May be used for corner or butt connections into NP6X48 or PP6X96.  
(2 qty.) 2" wide x 1 1/2" x 2" Angle Brackets.  
(6 qty.) #14 x 2 1/2" Stainless Steel Flat Head Screws.


 
## 5" Balustrade System Bottom Rail

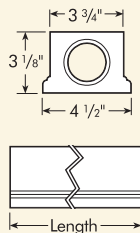

Part Number	Length	Baluster Rail Installation Kit* <small>(See Installation Guide Page 32)</small>		Rail Support Block <small>(See Below)</small>
<b>BBR5X96</b>	96"	BRK5		RSB4X4X6
<b>BBR5X144</b> <small>Note: Max. rail span distance for field applications is 96"</small>	144"	BRK5		RSB4X4X6

\*Connects both ends of one 5" Rail to applications.  
May be used for corner or butt connections into NP6X48 or PP6X96.  
(2 qty.) 2" wide x 1 1/2" x 2" Angle Brackets.  
(6 qty.) #14 x 2 1/2" Stainless Steel Flat Head Screws.


## 5" Balustrade System Rail Support Block

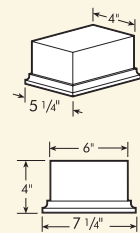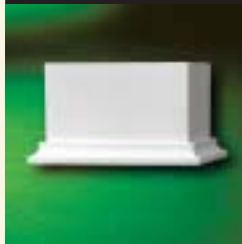  

Part Number	
<b>RSB4X4X6</b>	

Rail Support Blocks should be placed under the Bottom Rail at a span of every 48" or less. These blocks can be trimmed for height.

## 5" Balustrade System Baluster Top Rail Radius

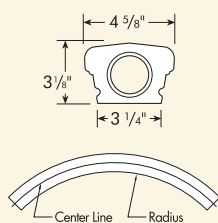 

Part Number	Radius	Center Line Length	Baluster Rail Installation Kit* <small>(See Installation Guide Page 32)</small>	
<b>NEW BTRR5X36</b>	36"	56" (1/4 Circle)	BRK5	
<b>NEW BTRR5X60</b>	60"	98" (1/4 Circle)	BRK5	
<b>NEW BTRR5X155</b>	155 1/2"	122" (1/8 Circle)	BRK5	

\*Connects both ends of one 5" Rail to applications.  
May be used for corner or butt connections into NP8X48 or PP8X96.  
(2 qty.) 4" wide x 1 1/2" x 2" Angle Brackets.  
(8 qty.) #14 x 2 1/2" Stainless Steel Flat Head Screws.

