 



12" Balustrade System Top Rail

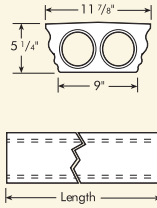

| Part Number | Length | Baluster Rail Installation Kit* <small>(See Installation Guide Page 38)</small> | |
|-------------|--------|--|--|
| BTR12X96 | 96" | BRK12 | |
| BTR12X120 | 120" | BRK12 | |

*Connects both ends of one 12" Rail to applications.
 (4 qty.) Bear Claw Brackets.
 (16 qty.) #12 x 3/4" Pan Head Screws.
 (4 qty.) 3/16"-18 x 5" Hex Head Cap Screws.
 (2 qty.) 1/4"-20 x 2" Flat Head Phillips Thread Cutting Screws.
 (4 qty.) 3/16" Clip Nuts.
 (4 qty.) 1 1/2" O.D. x 5/16" I.D. x 3/64" thick Fender Washers.

 
12" Balustrade System Bottom Rail

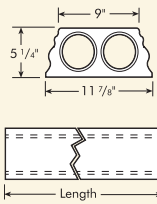

| Part Number | Length | Baluster Rail Installation Kit* <small>(See Installation Guide Page 38)</small> | | Rail Support Block <small>(See Below)</small> |
|-------------|--------|--|--|--|
| BBR12X96 | 96" | BRK12 | | RSB4X4X6 |
| BBR12X120 | 120" | BRK12 | | RSB4X4X6 |

*Connects both ends of one 12" Rail to applications.
 (4 qty.) Bear Claw Brackets.
 (16 qty.) #12 x 3/4" Pan Head Screws.
 (4 qty.) 3/16"-18 x 5" Hex Head Cap Screws.
 (2 qty.) 1/4"-20 x 2" Flat Head Phillips Thread Cutting Screws.
 (4 qty.) 3/16" Clip Nuts.
 (4 qty.) 1 1/2" O.D. x 5/16" I.D. x 3/64" thick Fender Washers.

 12" Balustrade System Rail Support Block

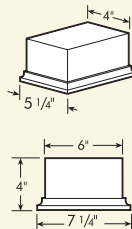

| Part Number | |
|-------------|--|
| RSB4X4X6 | |

Rail Support Blocks should be placed under the Bottom Rail at a span of every 48" or less. These blocks can be trimmed for height.